


Twin Engines with Mechanical Binnacle Controls - Multifunction Gauges

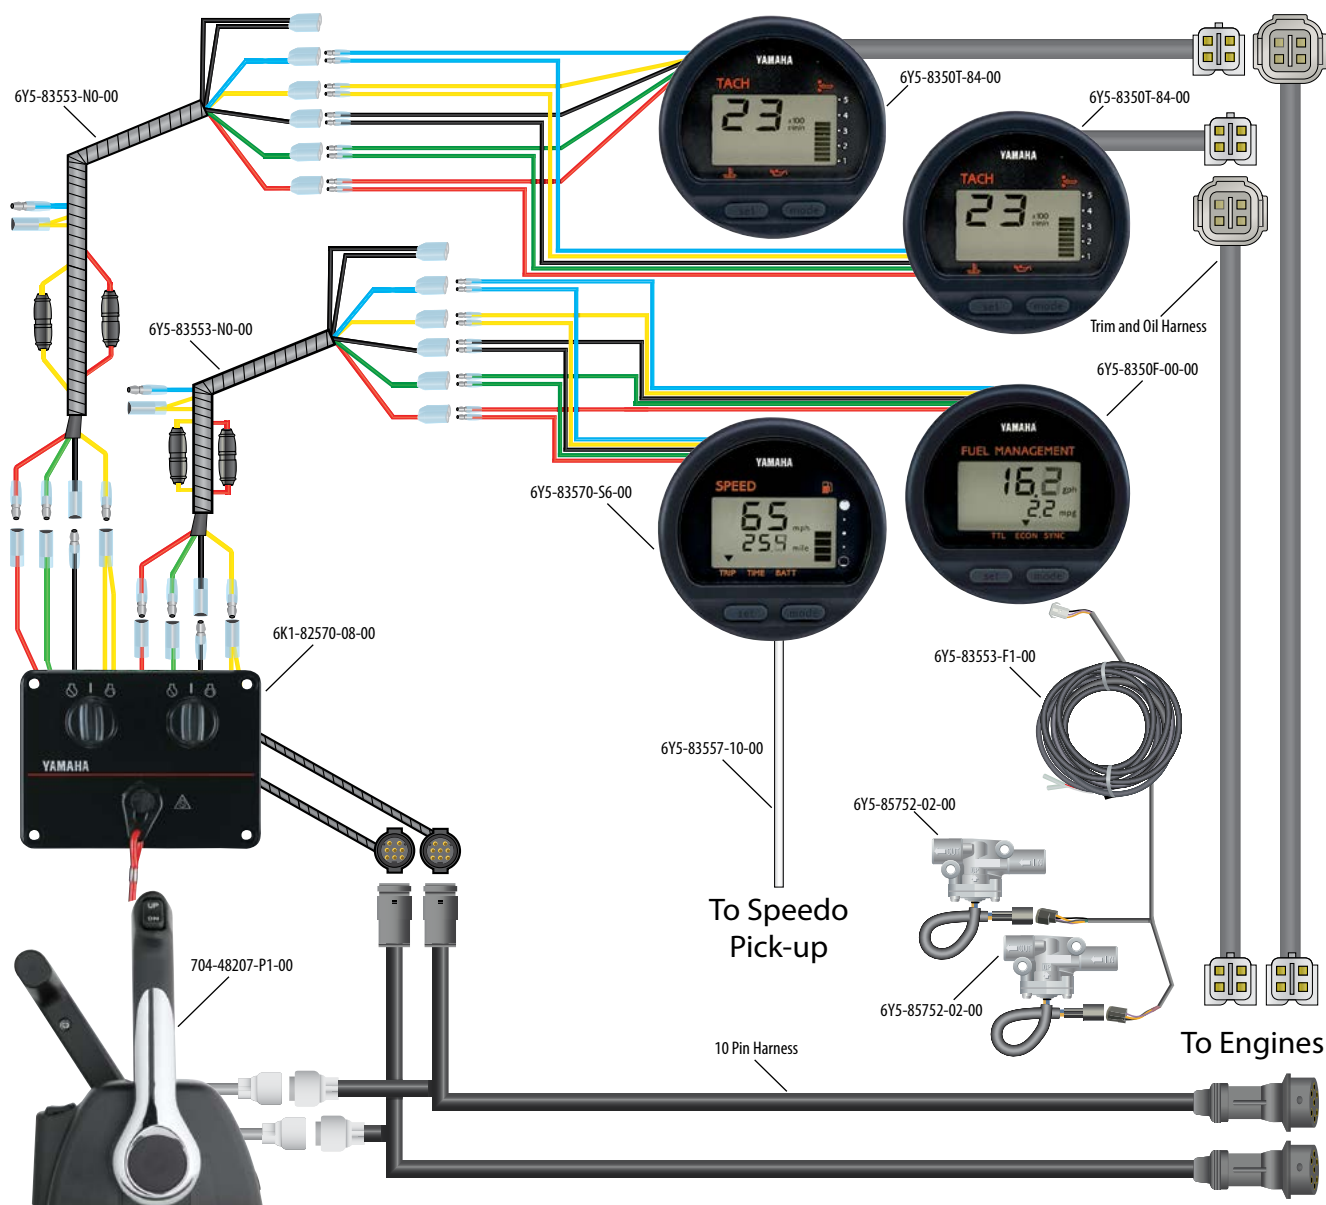

Parts order list for basic installation:

Quantity	Description	Part Number
1	Twin Engine 704 Control Box	704-48207-P1-00
1	Twin Engine Key Switch Panel	6K1-82570-08-00
2	Multifunction Tachometer	6Y5-8350T-83-00
1	Multifunction Speedometer	6Y5-83570-56-00
1	Multifunction Fuel Meter Kit	6Y5-W0088-54-00
1	Fuel Flow Sensor (extra for twins)	6Y5-85752-02-00
1	Speedometer Tube, 8.0 m	6Y5-83557-10-00
2	Dual Fuse Harness	6Y5-83553-N0-00
2	Clamp	90465-10098-00
10	Clamp	90465-13M39-00
2	10 Pin Main Harness	See List ¹
2	Trim and Oil Harness (2005~)	See List ²

¹ 10-Pin Harnesses

16 ft.	688-8258A-50-00
20 ft.	688-8258A-60-00
23 ft.	688-8258A-70-00
26 ft.	6K1-8258A-40-00
31.2 ft.	61B-8258A-01-00

² 2005~ Trim and Oil Harness


16.4 ft.	6Y5-83653-00-00
19.7 ft.	6Y5-83653-10-00
23 ft.	6Y5-83653-20-00
26.3 ft.	6Y5-83653-30-00
30 ft.	6Y5-83653-40-00
35 ft.	6Y5-83653-50-00

**Select Yamaha Item # to Open
in PPT ONLINE STORE**

Rigging Estimate Guide

Select Yamaha Item # to Open
in PPT ONLINE STORE

Twin Engines with Mechanical Binnacle Controls - Command Link®

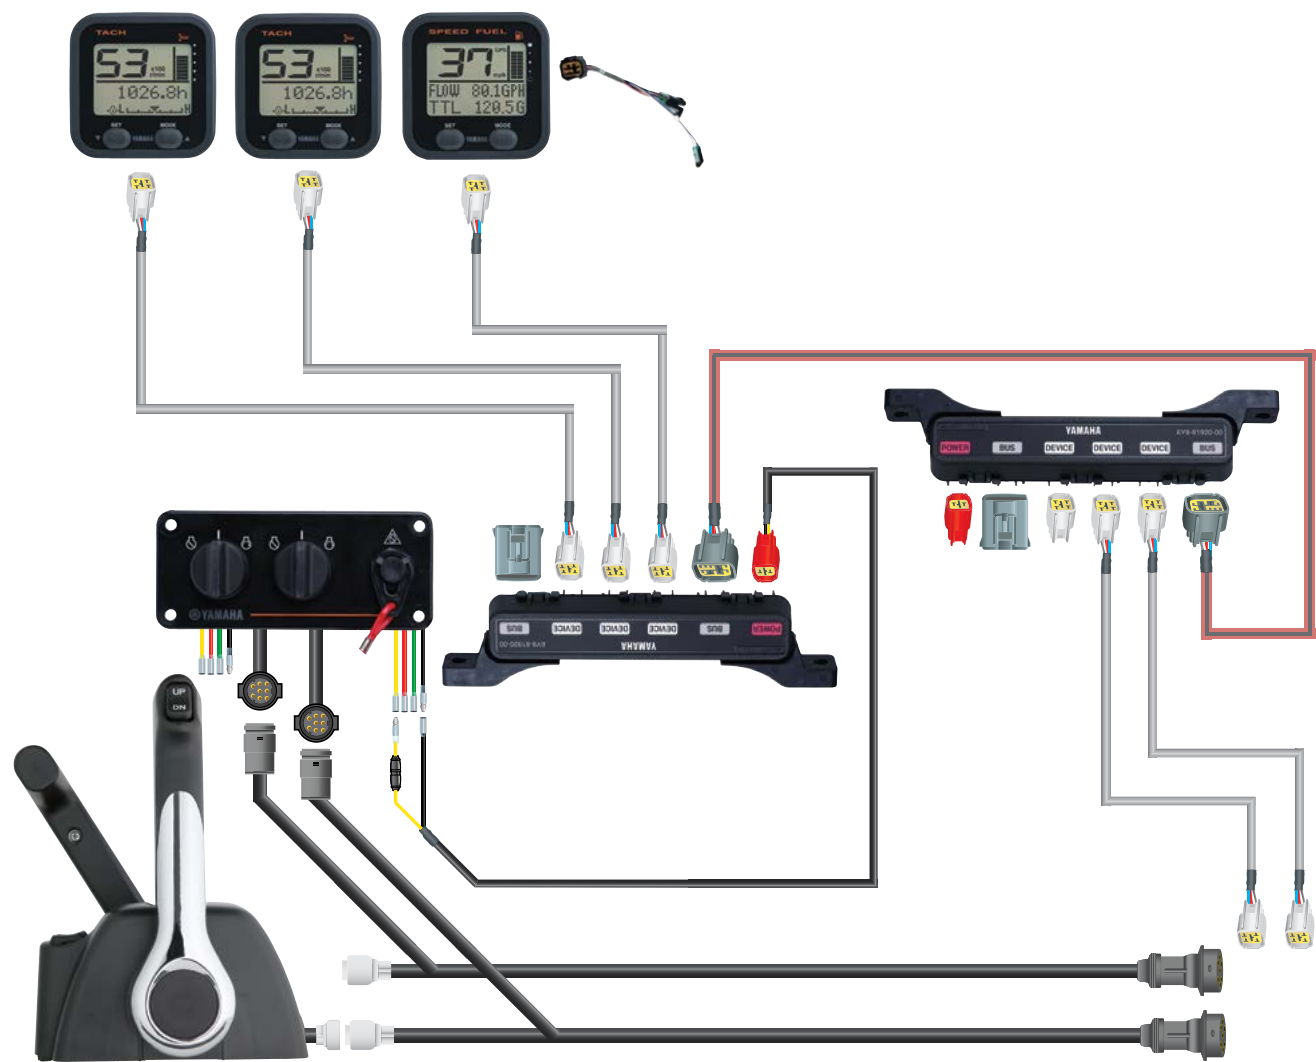

Parts order list for basic installation:

Quantity	Description	Part Number
2	Command Link Tachometer	6Y8-8350T-01-00
1	Command Link Speed / Fuel Gauge	6Y8-83500-01-00
2	Multi-Hub Assembly	6Y8-81920-01-00
1	Power Lead, 8 ft.	6Y8-83553-01-00
1	Cap, 2 Pin	6Y8-82582-01-00
1	Cap, 4 Pin	6Y8-82582-11-00
1	Speed Sensor Kit	60V-8A4L1-13-00
1	704 Twin Engine Binnacle Control Box	704-48207-P1-00
1	Twin Engine Main Switch Panel Assembly	6Y8-82570-03-00
1	Fuel Sender and GPSWire Lead	6Y8-8356N-01-00
1	Main Wire Harness, 10 Pin, 26.2 ft.	6K1-8258A-40-00
1	Main Wire Harness, 10 Pin, 31.2 ft.	61B-8258A-01-00
2	Pigtail Harness, Engine to Rear Hub, 12 ft.	6Y8-82521-51-00
1	Main Bus Harness, Rear Hub to Front Hub	See List ¹
3	Pigtail Harness, Front Hub to Gauges	See List ²


¹ Main Buss Harnesses

1 ft.	6Y8-82553-01-00
10 ft.	6Y8-82553-50-00
15 ft.	6Y8-82553-11-00
20 ft.	6Y8-82553-21-00
25 ft.	6Y8-82553-31-00
30 ft.	6Y8-82553-41-00

² Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Twin Engines with Mechanical Binnacle Controls - Command Link®

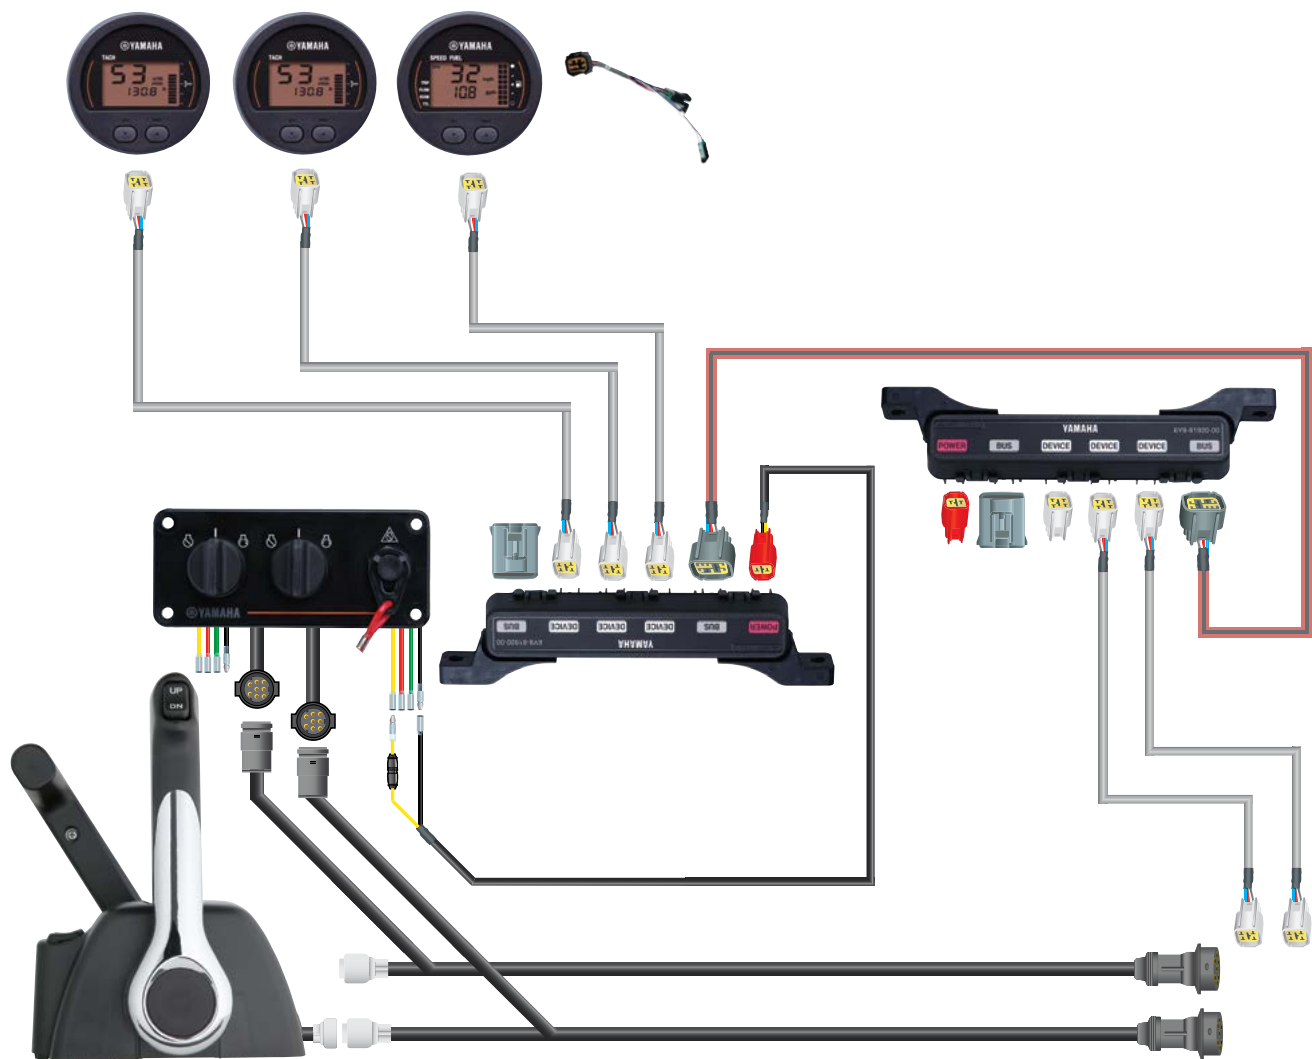

Parts order list for basic installation:

Quantity	Description	Part Number
1	Command Link® Twin Engine Three Gauge Kit w/ 704 Control	6Y8-0E83R-51-00
1	Main Bus Harness, Rear Hub to Front Hub	See List ¹
3	Pigtail Harness, Front Hub to Gauges	See List ²

¹Main Buss Harnesses

1 ft.	6Y8-82553-01-00
10 ft.	6Y8-82553-50-00
15 ft.	6Y8-82553-11-00
20 ft.	6Y8-82553-21-00
25 ft.	6Y8-82553-31-00
30 ft.	6Y8-82553-41-00


²Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Rigging Estimate Guide

Select Yamaha Item # to Open
in PPT ONLINE STORE

Twin Engines with Mechanical Binnacle Controls - Command Link®

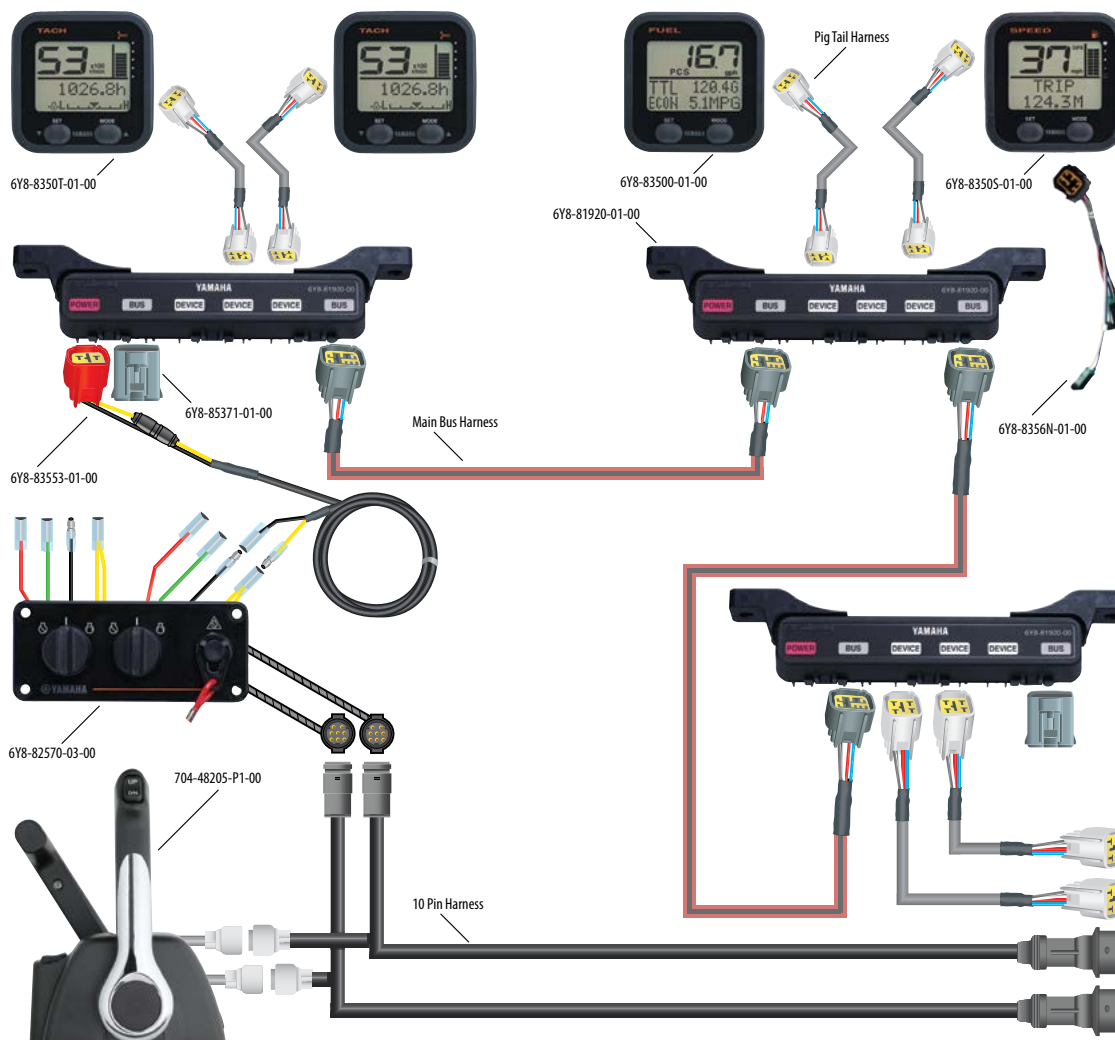

Parts order list for basic installation:

Quantity	Description	Part Number	¹ Main Buss Harnesses	² Pigtail Harnesses
2	Command Link Square Tachometer	6Y8-8350T-01-00	1 ft. 6Y8-82553-01-00	1 ft. 6Y8-82521-01-00
1	Command Link Square Speedometer	6Y8-8350S-01-00	10 ft. 6Y8-82553-50-00	2 ft. 6Y8-82521-11-00
1	Command Link Square Fuel Management	6Y8-8350F-01-00	15 ft. 6Y8-82553-11-00	3 ft. 6Y8-82521-21-00
3	Multi-Hub Assembly	6Y8-81920-01-00	20 ft. 6Y8-82553-21-00	6 ft. 6Y8-82521-31-00
1	Power Lead, 8 ft.	6Y8-8353-01-00	25 ft. 6Y8-82553-31-00	9 ft. 6Y8-82521-41-00
2	Cap, 2 Pin	6Y8-82582-01-00	30 ft. 6Y8-82553-41-00	12 ft. 6Y8-82521-51-00
3	Cap, 4 Pin	6Y8-82582-11-00		
1	Speed Sensor Kit	60V-8A4L1-13-00		
1	704 Twin Engine Binnacle Control Box	704-48205-P1-00		
1	Twin Engine Main Switch Panel Assembly	6Y8-82570-03-00		
1	Fuel Sender and GPSWire Lead	6Y8-8356N-01-00		
1	Main Wire Harness, 10 Pin, 26.2 ft.	6K1-8258A-40-00		
1	Main Wire Harness, 10 Pin, 31.2 ft.	61B-8258A-01-00		
2	Pigtail Harness, Engine to Rear Hub, 12 ft.	6Y8-82521-51-00		
1	Main Bus Harness, 2nd to 3rd hub, 1 ft.	6Y8-82553-01-00		
1	Main Bus Harness, Rear Hub to Front Hub	See List ¹		
4	Pigtail Harness, Front Hub to Gauges	See List ²		

General Information

Rigging Estimate Guide (Diagrams)

Rigging Components

Electrical Components

Engine Accessories

Propellers

Maintenance Items

Oils
Lubes

Detailing & Trailer Supplies

Accessories
& Apparel

Generators & Accessories



¹ Main Buss Harnesses


² Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Rigging Estimate Guide

Select Yamaha Item # to Open
in PPT ONLINE STORE

Twin Engines with DEC Controls - Command Link®

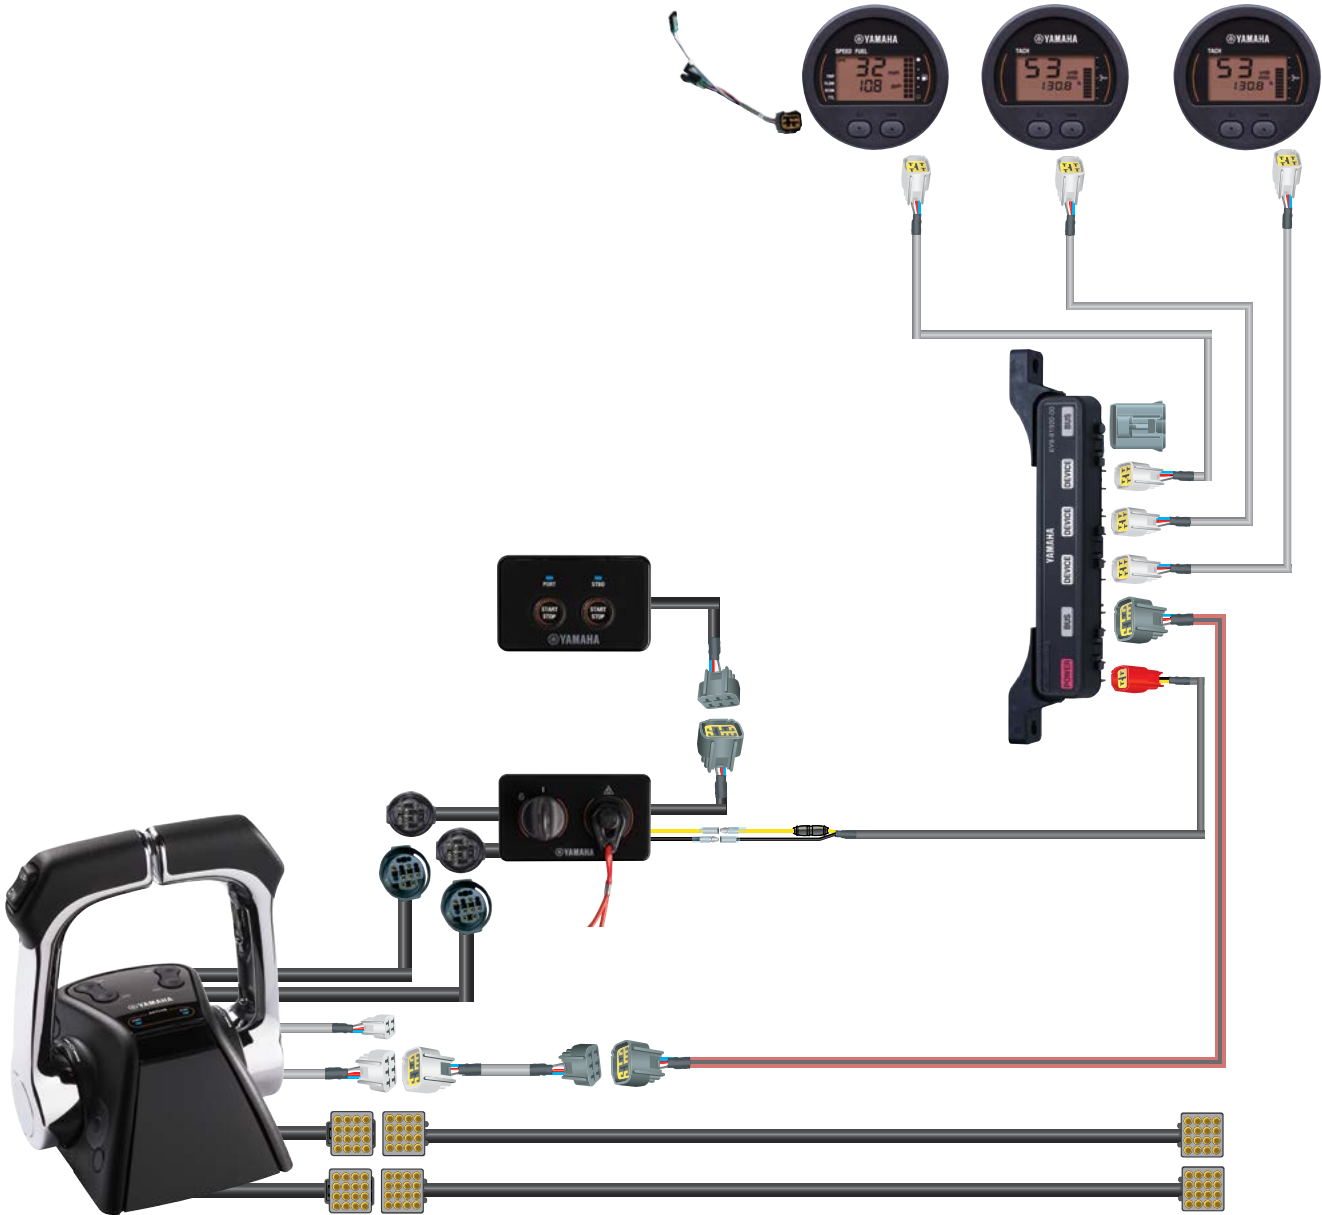

Parts order list for basic installation:

Quantity	Description	Part Number
1	Command Link Plus® Twin Main Station Control	CL-2MA
1	Twin Engines Key Switch Kit	6X6-W0035-50-00
1	Command Link® DEC Twin Main Station Gauge Kit	6X6-0E83R-31-00
2	DEC Main Harness	See List ¹
3	Pigtail Harness, Hub to Gauges	See List ²


¹ DEC Main Harnesses

20 ft.	6X6-8258A-00-00
23 ft.	6X6-8258A-10-00
26 ft.	6X6-8258A-20-00
33.5 ft.	6X6-8258A-30-00
39 ft.	6X6-8258A-40-00

² Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Twin Engines with DEC Controls - Command Link®

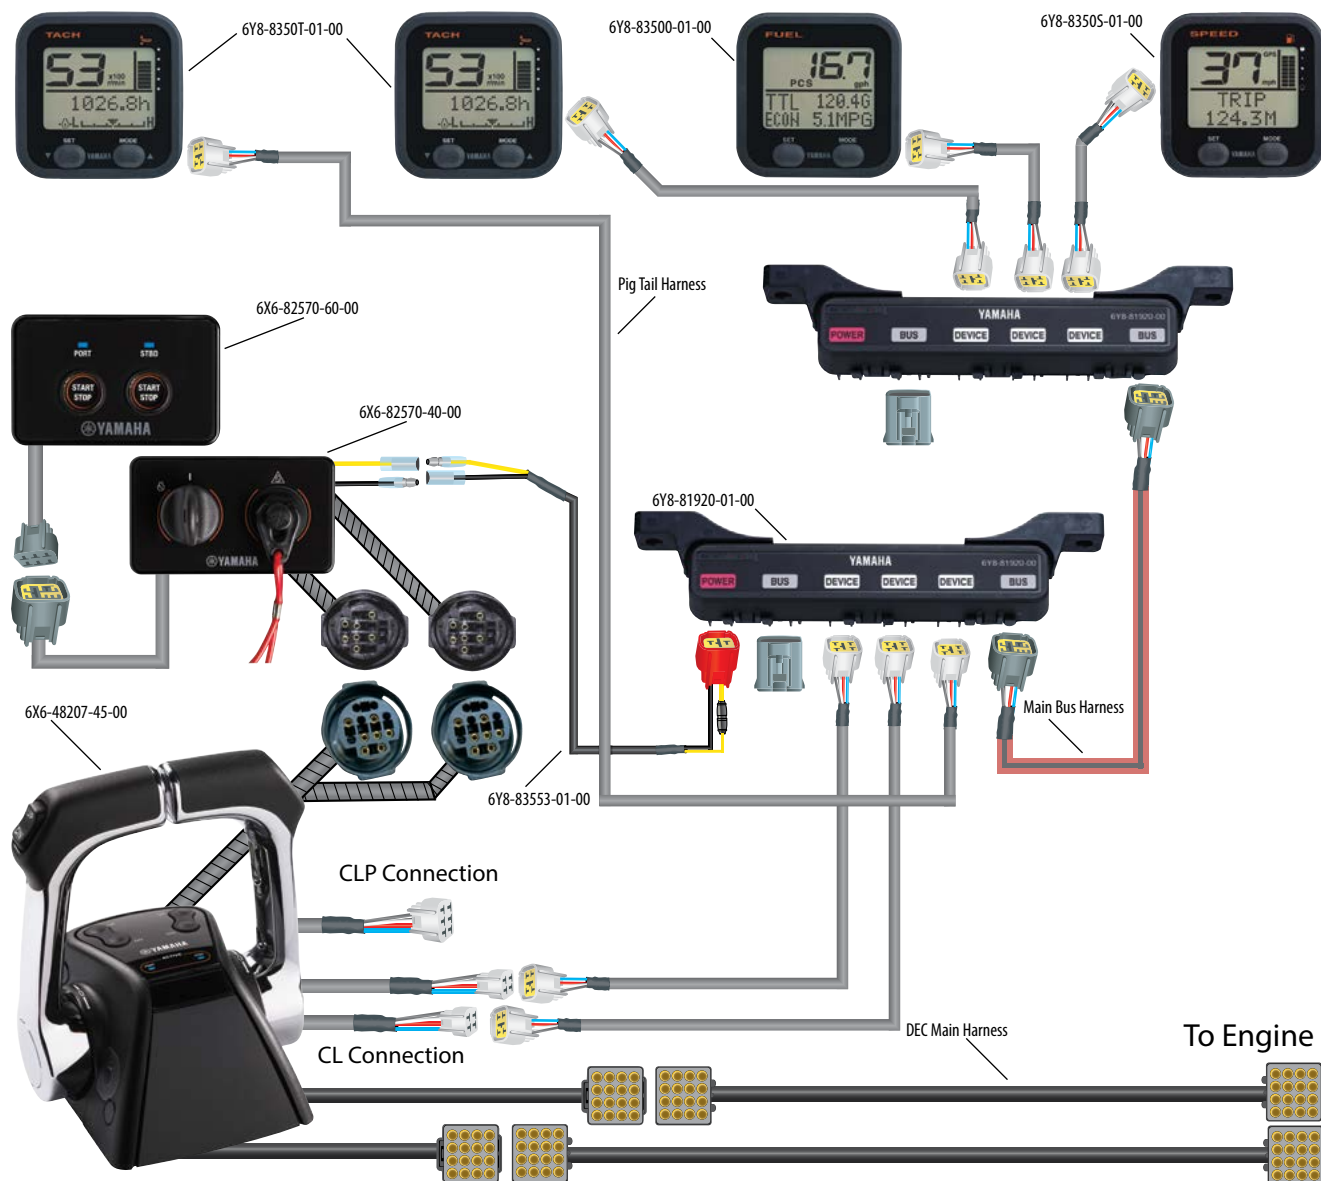

¹DEC Main Harnesses

20 ft.	6X6-8258A-00-00
23 ft.	6X6-8258A-10-00
26 ft.	6X6-8258A-20-00
33.5 ft.	6X6-8258A-30-00
39 ft.	6X6-8258A-40-00

²Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Parts order list for basic installation:


Quantity	Description	Part Number
1	Command Link Plus® Twin Main Station Control	CL-2MA
1	Twin Engines Key Switch Kit	6X6-W0035-50-00
2	Command Link Square Tachometer	6Y8-8350T-01-00
1	Command Link Square Speedometer	6Y8-8350S-01-00
1	Command Link Square Fuel Management	6Y8-8350F-01-00
2	Multi-Hub Assembly	6Y8-81920-01-00
1	Power Lead, 8 ft.	6Y8-83553-01-00
1	Cap, 2 Pin	6Y8-82582-01-00
1	Main Bus Harness, Hub to Hub, 1 ft.	6Y8-82553-01-00
1	Fuel Sender and GPSWire Lead	6Y8-8356N-01-00
2	DEC Main Harness	See List ¹
2	Pigtail Harness, Control box to Hub	See List ²
4	Pigtail Harness, Hub to Gauges	See List ²

Rigging Estimate Guide

Select Yamaha Item # to Open
in PPT ONLINE STORE

Twin Engines with DEC Controls - 6YC Display

NEW!

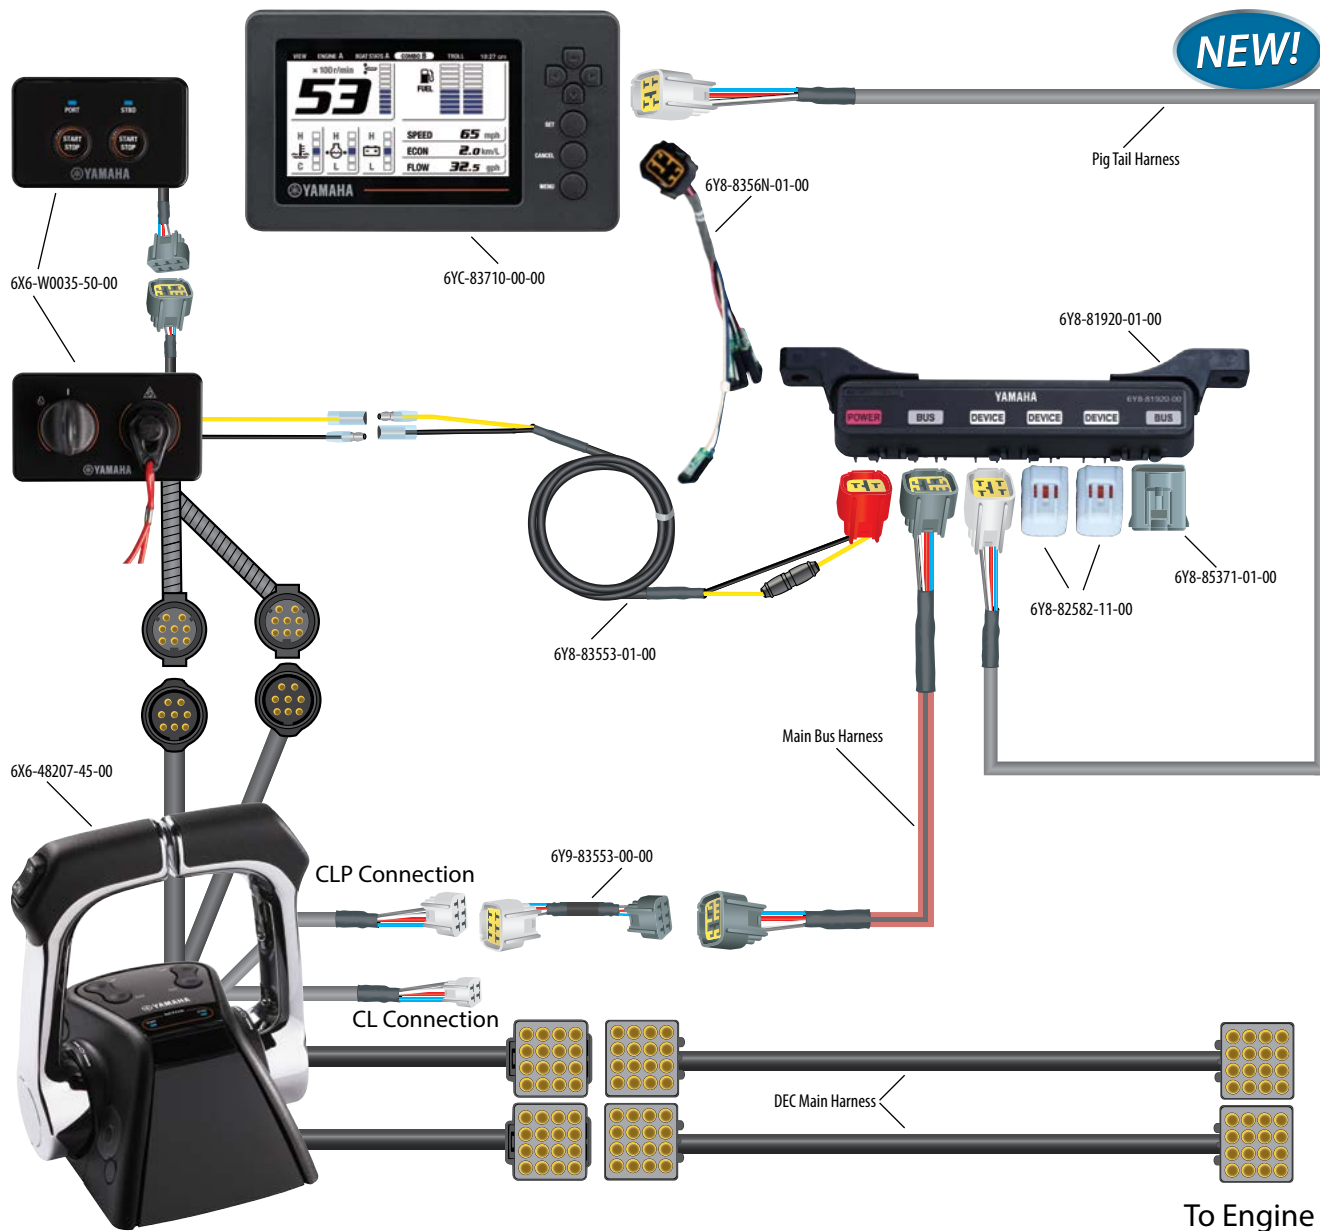

Parts order list for basic installation:

Quantity	Description	Part Number
1	Command Link Plus® Single Main Station Control	CL-2MA
1	Single Engine Key Switch	6X6-W0035-50-00
1	6YC Display Kit	6X6-0E83C-00-00
2	DEC Main Harness	See List ¹
1	Main Bus Harness, Control Box Adaptor to Hub	See List ²
1	Pigtail Harness, Hub to Display	See List ³

¹ DEC Main Harnesses

20 ft.	6X6-8258A-00-00
23 ft.	6X6-8258A-10-00
26 ft.	6X6-8258A-20-00
33.5 ft.	6X6-8258A-30-00
39 ft.	6X6-8258A-40-00


² Main Buss Harnesses

1 ft.	6Y8-82553-01-00
10 ft.	6Y8-82553-50-00
15 ft.	6Y8-82553-11-00
20 ft.	6Y8-82553-21-00
25 ft.	6Y8-82553-31-00
30 ft.	6Y8-82553-41-00

³ Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Twin Engines with DEC Controls - Command Link® Plus

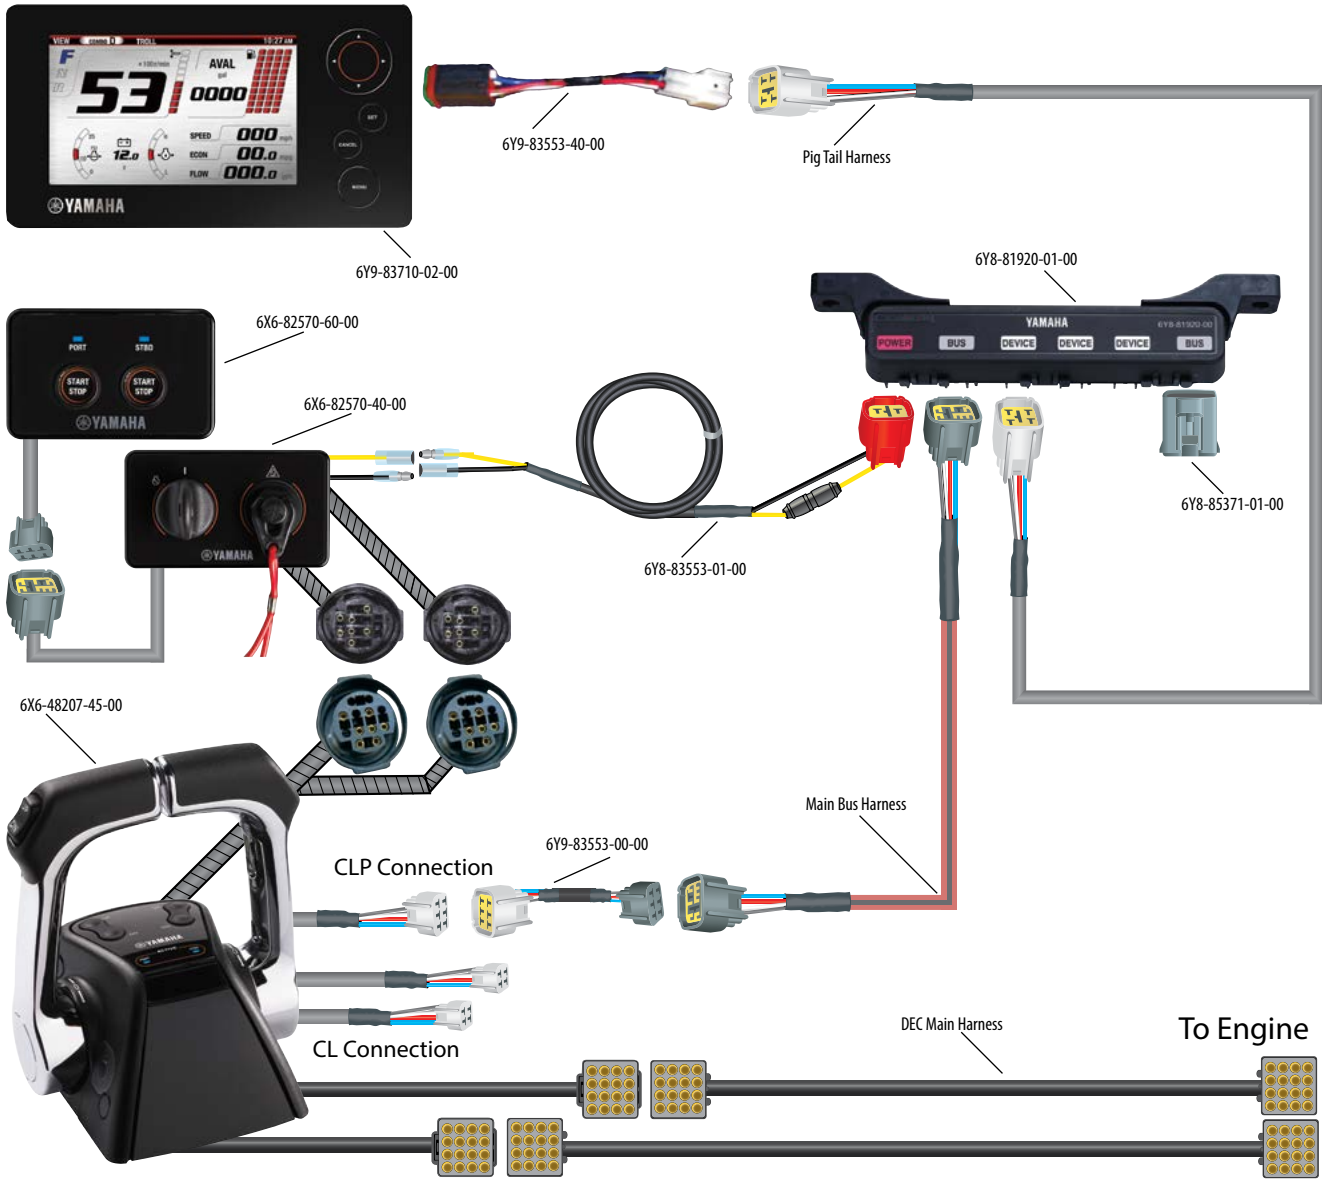

Parts order list for basic installation:

Quantity	Description	Part Number
1	Command Link Plus® Twin Main Station Control	CL-2MA
1	Twin Engines Key Switch Kit	6X6-W0035-50-00
1	Command Link Plus® Display Kit	MAR-CLPDU-KT-20
1	Command Link Plus® Display Installation Kit	MAR-CLPDI-KT-10
2	DEC Main Harness	See List ¹
1	Main Bus Harness, Control Box Adaptor to Hub	See List ²
1	Pigtail Harness, Hub to Display Harness	See List ³

¹ DEC Main Harnesses

20 ft.	6X6-8258A-00-00
23 ft.	6X6-8258A-10-00
26 ft.	6X6-8258A-20-00
33.5 ft.	6X6-8258A-30-00
39 ft.	6X6-8258A-40-00

² Main Buss Harnesses

1 ft.	6Y8-82553-01-00
10 ft.	6Y8-82553-50-00
15 ft.	6Y8-82553-11-00
20 ft.	6Y8-82553-21-00
25 ft.	6Y8-82553-31-00
30 ft.	6Y8-82553-41-00


³ Pigtail Harnesses

1 ft.	6Y8-82521-01-00
2 ft.	6Y8-82521-11-00
3 ft.	6Y8-82521-21-00
6 ft.	6Y8-82521-31-00
9 ft.	6Y8-82521-41-00
12 ft.	6Y8-82521-51-00

Rigging Estimate Guide

Select Yamaha Item # to Open
in PPT ONLINE STORE

Twin Engines with DEC Controls - 2nd Station

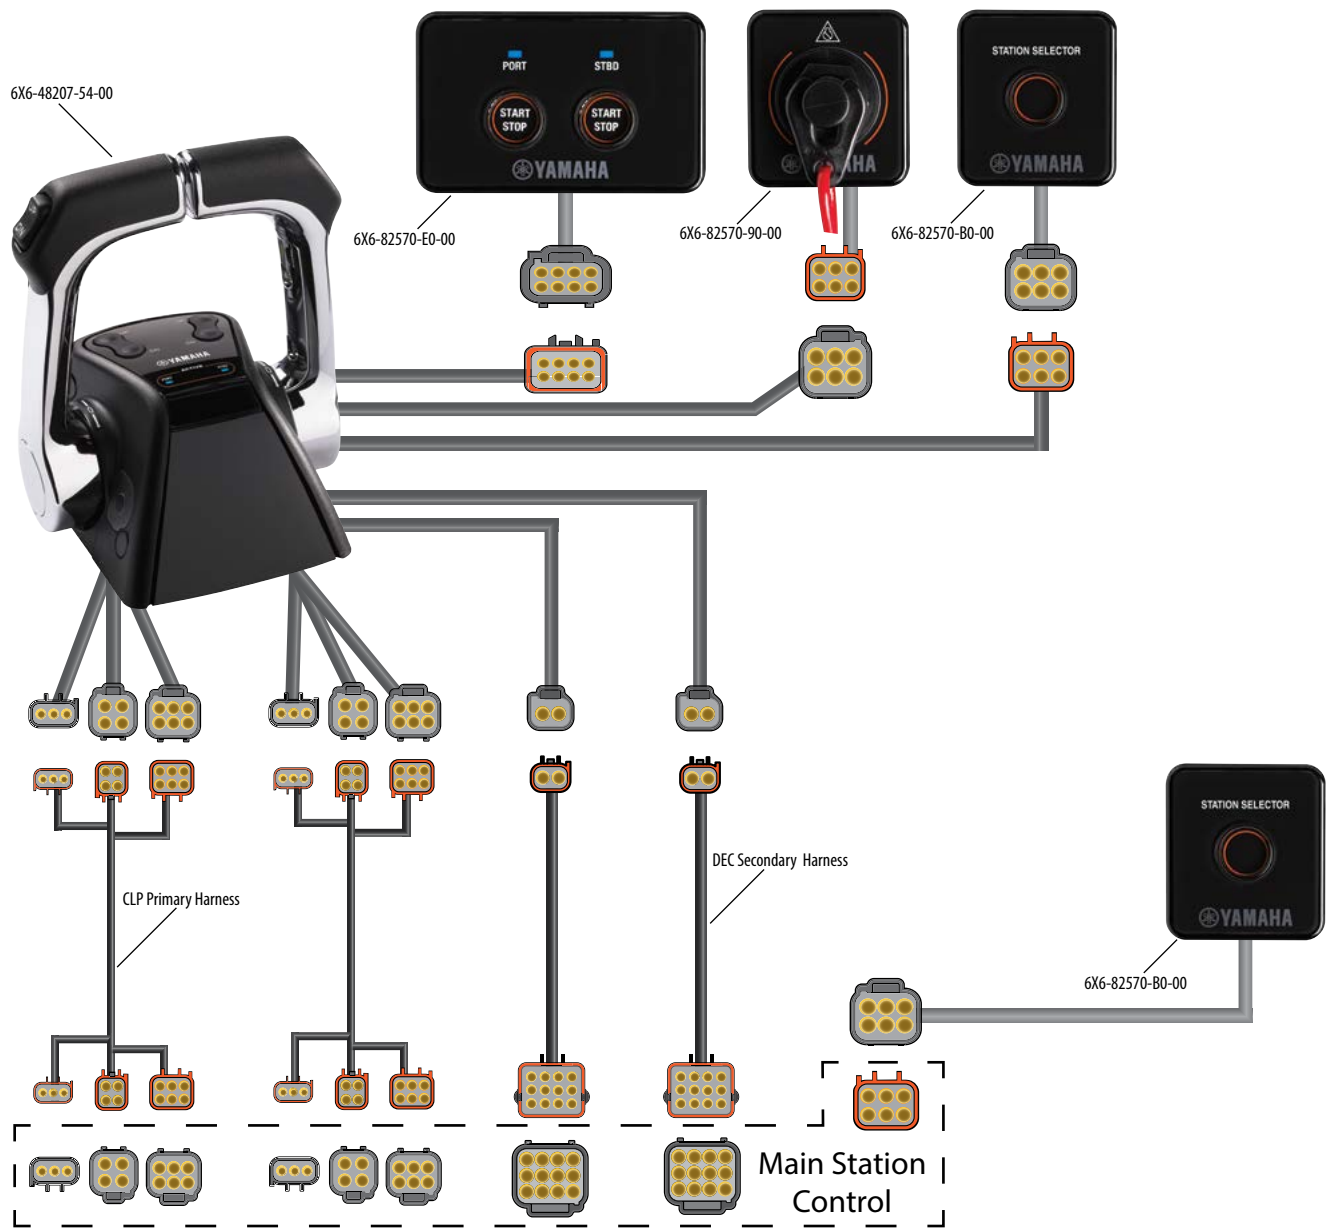

Parts order list for basic installation:

Quantity	Description	Part Number	¹ CLP Primary Harness		² DEC Secondary Harness	
			16 ft.	6X6-8258A-G0-00	16 ft.	6X6-8258A-B1-00
1	Command Link Plus® 2 nd Station Twin Engine Control Box	CL-2SA	26 ft.	6X6-8258A-H0-00	26 ft.	6X6-8258A-D1-00
1	Command Link Plus® 2 nd Station Switch Set	6X6-W0035-80-00	40 ft.	6X6-8258A-J0-00	40 ft.	6X6-8258A-F1-00
2	CLP Primary Harness	See List 1				
2	DEC Secondary Harness	See List ²				